


**4498 F-86K Sabre Dog
1/48 Wheels**
for Special Hobby kits

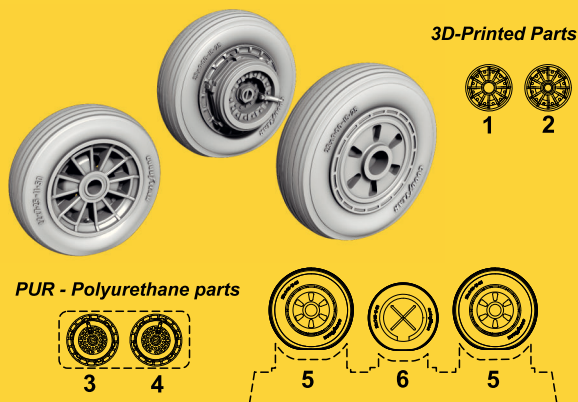

Resinové díly ohnuté popř. pokroucené vlivem teplotních změn a stárnutí materiálu, mohou být narovnány do požadovaného tvaru pomocí proudu teplé vody nebo vzduchu (fén na vlasy). Ohnuté 3D tisky narovnejte ponořením do horké vody, srovnejte je a zchladte studenou vodou. K lepení použít kvanoakrylátové lepidlo! Kontaktní plochy doporučujeme před lepením odmastit.
Různé drátky a tyčinky nejsou přiloženy.

Parts slightly distorted and bent owing to temperature changes or due to material aging can be straightened to requested shape by hot water or hot air jet (hair dryer). This process can be repeated till result is entirely satisfactory. You can also correct bent 3D printed parts: put them into hot water, straighten them and cool them in cold water. For best result use cyanoacrylate glue! Ungreasing contact areas is recommended before gluing. Wires and rods not included.




Special Hobby offer as well:

**1/48 AH-1G
Cobra
Hi-Tech kit**

containing resin parts,
3D-printed parts,
masks and P-E parts



Special Hobby, Mezilesí 718, Praha 9, 193 00, Czech Republic
e-mail: office@specialhobby.eu

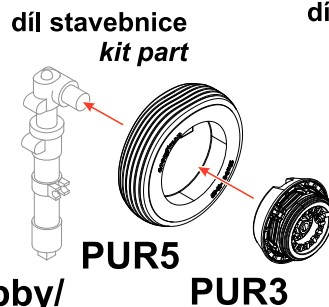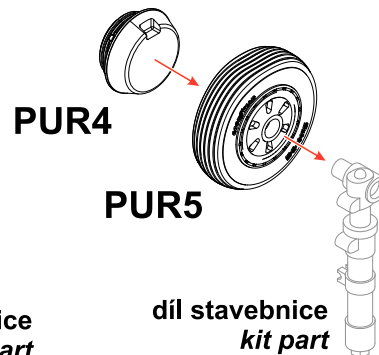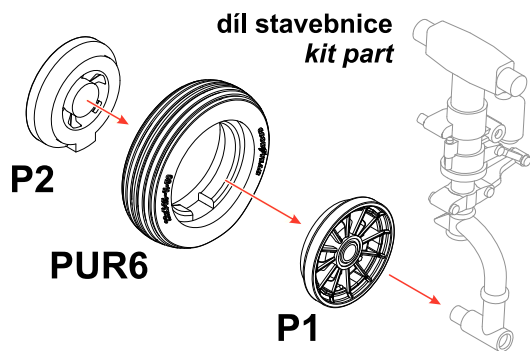

more information at
www.specialhobby.eu
or www.facebook.com/specialhobby/